



DO ALL DECORATING BEFORE ASSEMBLY.

 Apply cement around ends of canoe, between edge and holes, on inside of leather.

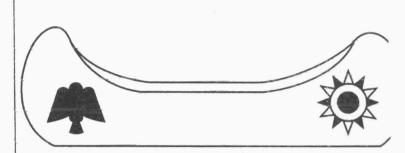


2. Fold canoe in half, aligning holes, in ends and adhere ends together

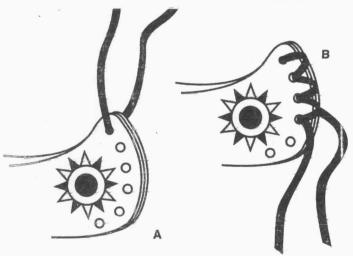



- Cut lace in half. Point both ends of each half.
  - A. Push one end of lace through top hole in one end of canoe. Pull lace through until you have an equal amount of lace on each side of hole.
  - B. With one end of lace, cross over edge of canoe and go through next hole. With other end, cross over edge of canoe and first lace and go through same hole from the opposite side. Repeat this step 3 more times.
  - C. When you reach the last hole, cross laces over edge and go through last hole but bring both ends of lace out on inside of cance. Trim off ends of lace.

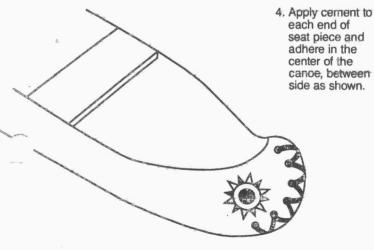



Apply cement to center of circular stand and adhere to bottom center of canoe.

DISCOVER OUR OTHER LEATHER CRAFT RELATED PRODUCTS: Knife Pouch Kits No. 17280 - 17279 • Key Fob Kits No. 17249 - 17250 • Indian Scout Moc Kits No. 17305 thru 17313 • Wrist Band No. 17281 thru 17286 • Link Belt Kits No. 17354 -17355

